

# NK Cox Box Maintenance Kit

Follow these steps to keep your Cox-Box, Cox-Vox, Microphones & Wiring static-free and reliable for years.

*Note: Customer will need to obtain Isopropyl (rubbing) Alcohol, not included, prior to performing these steps.*

## Cox Box Panel Connectors - MONTHLY

**WASH** the Cox Box panel with warm water and mild soap. **RINSE** well. **DRY** thoroughly.

CLEAN



1. Use alcohol to clean the inside of all the connector sockets



2. Insert supplied metal brush into each socket several times to loosen and clean debris



3. Next use a pipe cleaner to remove any excess alcohol and debris.

PROTECT



1. Apply Nyogel grease to each of the sockets. Be careful not to overfill, a small amount is needed.



2. Apply Nyogel to foam swab provided.



3. Using foam swab, apply Nyogel to the entire outside of both rubber connectors, not the plastic.


## Speaker and Harness Connectors

- Freshwater programs- TWICE A YEAR
- Saltwater programs - MONTHLY

CLEAN



1. Use alcohol to clean the inside of the connector sockets.

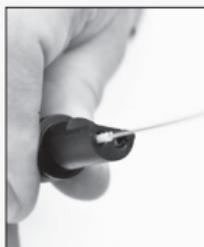


2. Insert supplied metal brush into each socket several times to loosen and clean debris



3. Next use a pipe cleaner to remove any excess alcohol and debris.

PROTECT

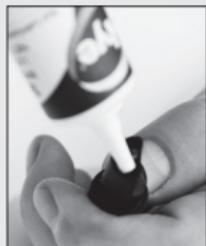

1. Apply Nyogel grease to both sockets. Be careful not to overfill, a small amount is needed.



2. Apply Nyogel to foam swab provided.



3. Using foam swab, apply Nyogel to the entire outside of rubber connector.

## Charging and Storing Your Cox Box

Place your unit on charge whenever not in use, but avoid leaving it on charge for more than three days continuously. At the end of the season, charge the unit for 12 hours, disconnect the microphone and charger, and store in a cool dry place until ready to use next season.

For more information, Contact Nielsen-Kellerman  
support@nkhome.com • www.nkhome.com • 610.447.1555